

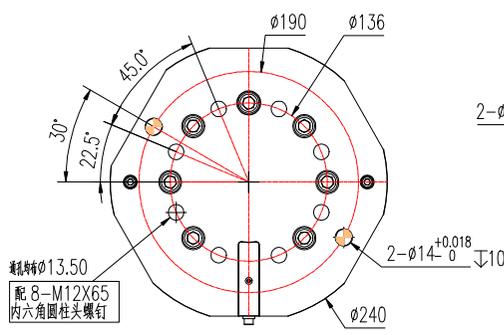
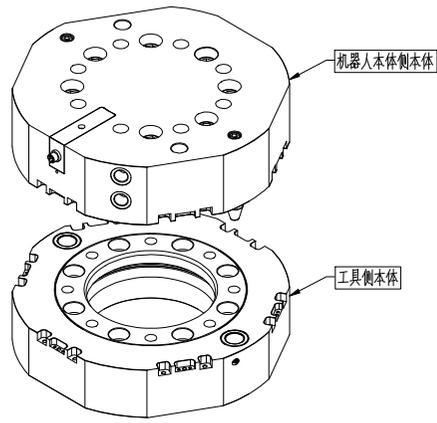


TS-AC-360

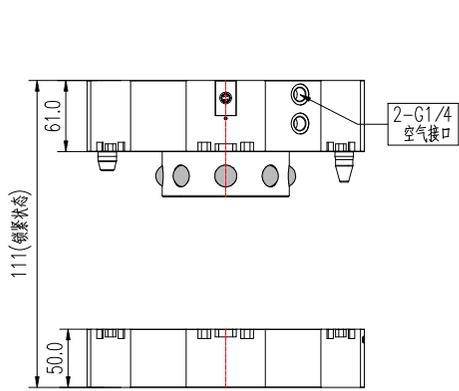

机器人本体侧安装尺寸图

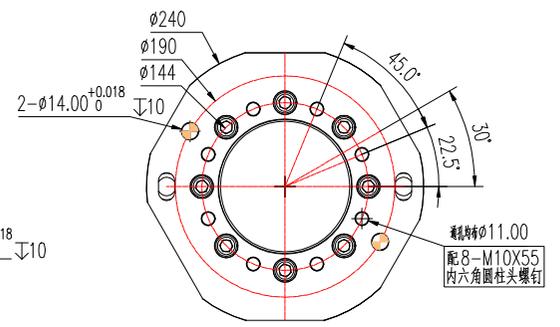

工具本体侧安装尺寸图

搭配模块

电模块部分

- TS-AC-360R — M-D309
- TS-AC-360R — M-D316
- TS-AC-360R — M-D324
- TS-AC-360R — M-D332
- TS-AC-360T — T-D309
- TS-AC-360T — T-D316
- TS-AC-360T — T-D324
- TS-AC-360T — T-D332

气模块部分

- TS-AC-360R — M-P15M5
- TS-AC-360R — M-P901
- TS-AC-360R — M-P602
- TS-AC-360R — M-P503
- TS-AC-360T — T-P15M5
- TS-AC-360T — T-P901
- TS-AC-360T — T-P602
- TS-AC-360T — T-P503

伺服模块部分

- TS-AC-360R — M-SF25070334
- TS-AC-360T — T-SF25070334

水模块部分

- TS-AC-360R — M-S203
- TS-AC-360T — T-S203

焊接模块

- TS-AC-360R — M-HJ1503
- TS-AC-360T — T-HJ1503